

download all files and extract if necessary

if opened, close configurator or USBConfig

connect gateway with micro-USB cable (PC with admin rights)

if you have a 3rd party anti virus, deactivate it for the update

execute v1.5.0_flash_usb_both_drivers.bat

the first time updating a device from us sometimes fails because Windows try's to search the driver online.


Just make a power cycle and try again.

If windows doesn't have the driver, install it manually by dpinst_amd64.exe in

\usb_driver\Win10


(Seen in device manager at usb, if there is one with a "!")

Start USBConfig and set 3d System

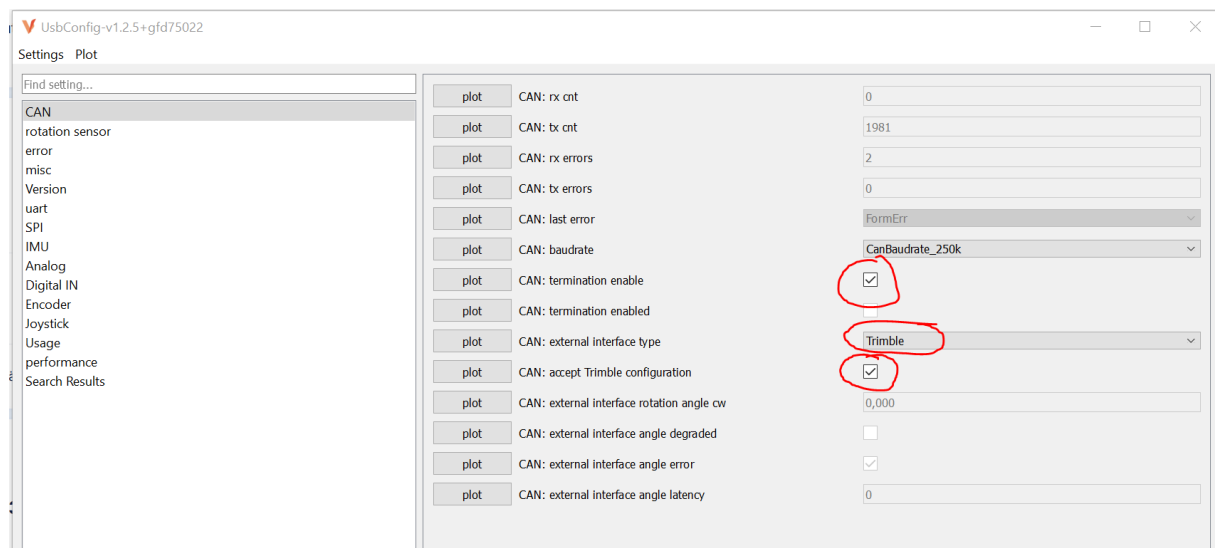


Set Rotation Sensor steps per rotation

TR7	3528
TR11	3800
TR14	4200
TR19	4700
TR25	4100

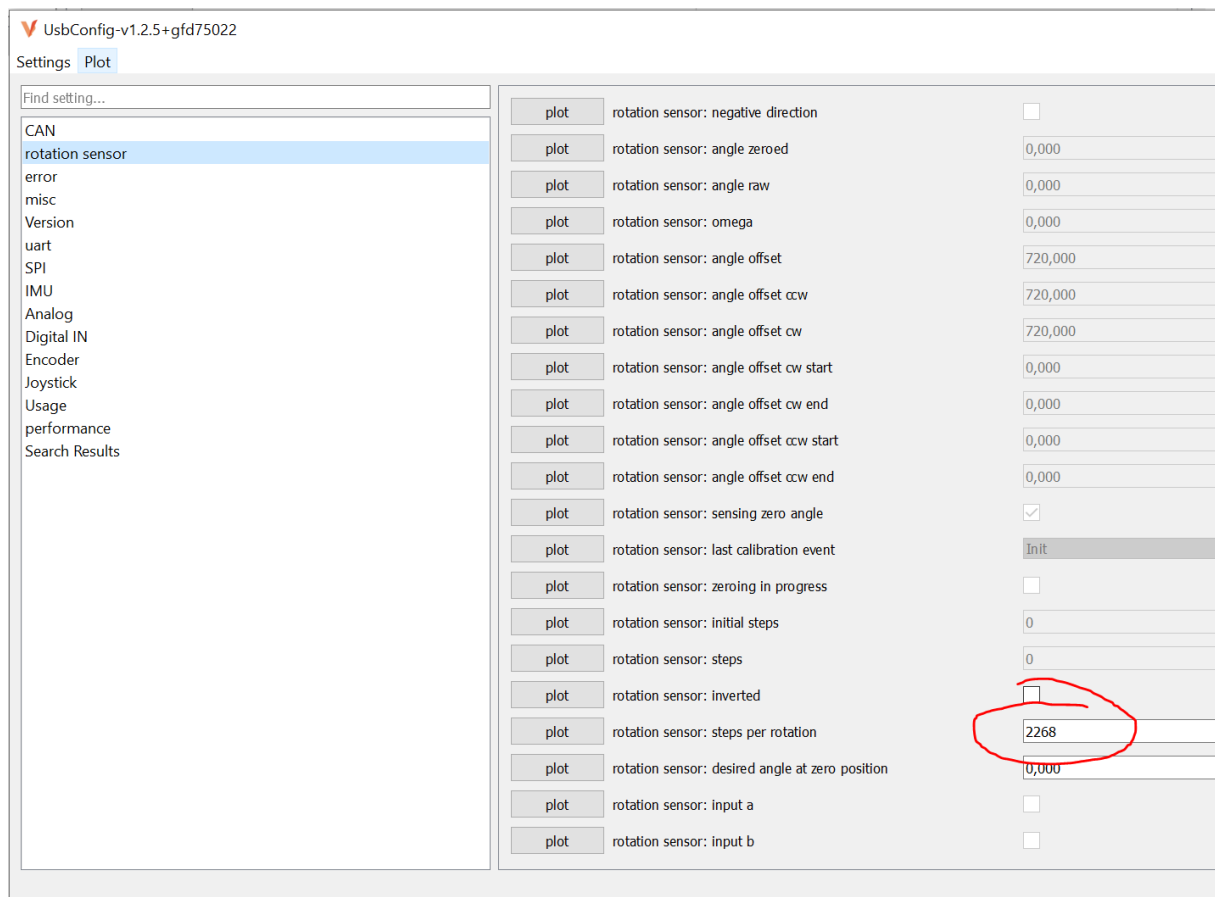

save settings

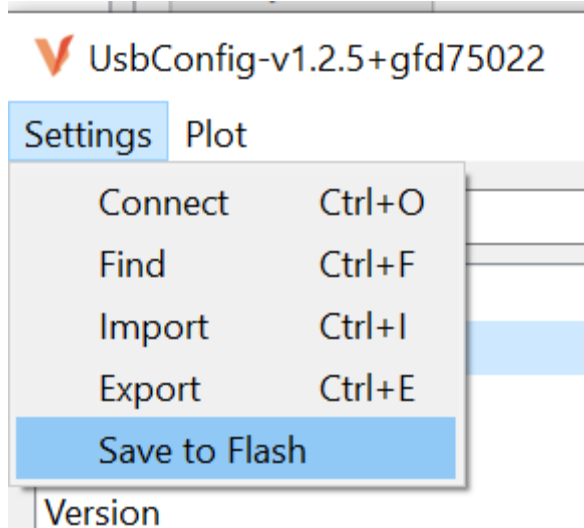

Disconnect USB

make a power cycle

rotate one full round in each direction